# Cheerlights - Part 1

Using a Tri-Color LED in Arduino

# Running an Arduino Sketch

- Open your Arduino environment by opening the arduino.exe file that you saved during setup.
- Upload the blink sketch to your Galileo by navigating to File > Examples > 01.Basics > Blink to load the sketch file
- Make sure that the Board in the Tools menu is Galileo Gen 2, and the Serial Port matches the one indicated by your Device Manager
- Click the Upload button



#### What's in the Blink Sketch

- The setup() function runs once at the start
  - Here, it sets pinMode for the LED to OUTPUT.
     It's necessary to set pinMode for all digital pins used
- The loop() function that runs over and over
  - It uses digitalWrite to write either HIGH (on) or LOW (off) voltage to the LED pin, waiting 1000 milliseconds in between each command

### Common Arduino functions

- digitalRead() will read input from a digital pin (either 1 or 0)
- digitalWrite() will write a digital value to a digital pin (either 1 or 0, HIGH or LOW)
- analogwrite() will write an analog value to a pin (given as an integer between 0 and 255)
- analogRead() will read an analog voltage value from an analog pin and present it as an integer from 0 to 1023

### Other Notes about Arduino Code

- In C language, all variables have to be declared by type (int, float, double, long, String, etc)
   int i = 0;
- Similarly, functions must be declared by the type of their return value
  - void setup()int get\_value()
- All lines must end in a semicolon (;)
- Functions, loops, and if statements are blocked and denoted by curly braces: { }

### Your Tri-Color LED

- Four pins:
  - Ground (-)
  - Red pin
  - Green pin
  - Blue pin
- Each color pin will be connected to its own pin on the Galileo to be written individually




### Understanding the Tri-Color LED

- It has 3 LEDs in it (red, green, and blue) that can be given values from 0-255 to create colors
- Colors are expressed in RGB as a tuple, or list of three numbers (R,G,B)
- Red is (255,0,0), green is (0,255,0), blue is (0,0,255), and white is (255,255,255)
- Look online for the RGB codes for other common colors

### Setting Up the Circuit

- Tri-Color LED
- GND pin to Ground
- Resistors between each color pin and the Galileo socket
- In this sketch I have:
  - Red pin 9
  - Green pin 10
  - Blue pin 11

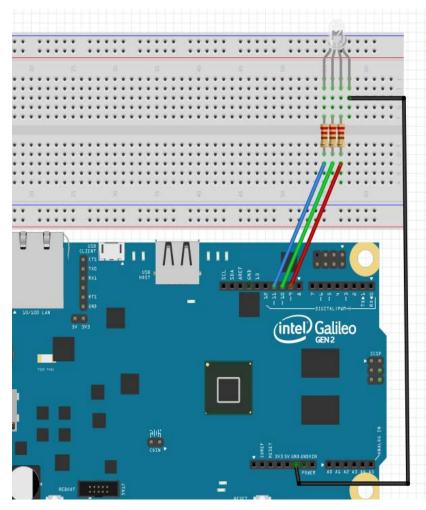

#### Arduino Code

- Open the tricolor\_led.ino sketch from your Arduino folder (remember that you copied all the Arduino files into your Documents/Arduino folder)
- It will cycle through some of the basic colors

#### Code Parts: Define Pins

```
int redPin = 9;
int greenPin = 10;
int bluePin = 11;
```

 This piece of code defines variables hold the pin numbers for each color pin

### Code Parts: Setup Function

```
void setup()
{
  pinMode(redPin, OUTPUT);
  pinMode(greenPin, OUTPUT);
  pinMode(bluePin, OUTPUT);
}
```

 This piece of code each pin as an OUTPUT pin, meaning we will tell the Galileo how much voltage to send to each pin

### Code Parts: Loop

```
void loop()
{
    setColor(255, 0, 0); // red
    delay(1000);
    setColor(0, 255, 0); // green
    delay(1000);
...
```

 The loop function sets each color for one second apiece by called a function we've created called setColor

#### Code Parts: setColor

```
void setColor(int red, int green, int blue)
{
   analogWrite(redPin, red);
   analogWrite(greenPin, green);
   analogWrite(bluePin, blue);
}
```

- This function is void (it does not return anything)
- It takes the RGB color values are arguments and uses the analogwrite function to send that voltage value to each color pin.

# Extending the Tri-Color Code

 Change the loop function so that the LED fades smoothly from red to green to blue

Hint: Use a for loop to increment one pin value as you decrease the other. See the solution in the file *tricolor\_led\_fader.ino*